

# FastMig

MR 200, MR 300

Operating manual	<b>EN</b>
Bruksanvisning	<b>DA</b>
Gebrauchsanweisung	<b>DE</b>
Manual de instrucciones	<b>ES</b>
Käyttöohje	<b>FI</b>
Manuel d'utilisation	<b>FR</b>
Manuale d'uso	<b>IT</b>
Gebruiksaanwijzing	<b>NL</b>
Brugsanvisning	<b>NO</b>
Instrukcja obsługi	<b>PL</b>
Manual de utilização	<b>PT</b>
Инструкции по эксплуатации	<b>RU</b>
Bruksanvisning	<b>SV</b>
操作手册	<b>ZH</b>



# **OPERATING MANUAL**

**English**

## CONTENTS

1.	Preface.....	3
1.1	General.....	3
2.	Use.....	4
2.1	Connecting and mounting the panels.....	4
2.2	Functions of MR 200 and MR 300 panel.....	5
2.3	MR 200 and MR 300 operations.....	6
2.4	Panel MR 200 and MR 300 Setup parameters.....	8
3.	FastMig error codes.....	10
4.	Disposal.....	11
5.	Ordering numbers.....	11

EN

# 1. PREFACE

## 1.1 General

Congratulations on choosing the MR panel. Used correctly, Kemppi products can significantly increase the productivity of your welding, and provide years of economical service.

This operating manual contains important information on the use, maintenance and safety of your Kemppi product. The technical specifications of the equipment can be found at the end of the manual.

Please read the manual carefully before using the equipment for the first time. For your own safety and that of your working environment, pay particular attention to the safety instructions in the manual.

For more information on Kemppi products, contact Kemppi Oy, consult an authorised Kemppi dealer, or visit the Kemppi web site at [www.kemppi.com](http://www.kemppi.com).

The specifications presented in this manual are subject to change without prior notice.

### **Important notes**

Items in the manual that require particular attention in order to minimise damage and personal harm are indicated with the **'NOTE!'** notation. Read these sections carefully and follow their instructions.


### **Disclaimer**

While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions. Kemppi reserves the right to change the specification of the product described at any time without prior notice. Do not copy, record, reproduce or transmit the contents of this guide without prior permission from Kemppi.

## 2. USE


FastMig MR 200 and MR 300 panels are supposed to be used only with synergic power sources FastMig M 320, 420 or 520. MR 200 panel can be mounted to MXF 63 (200 mm wire spool) wire feeder and MR 300 panel to MXF 65 and 67 (300 mm wire spool) wire feeders.

### 2.1 Connecting and mounting the panels

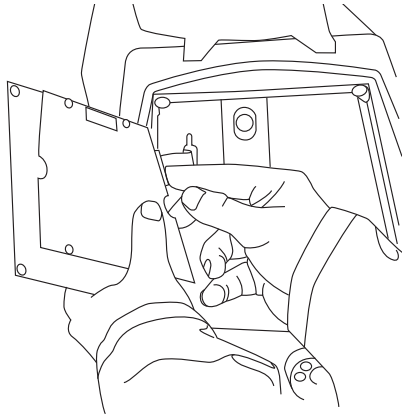


Fasten the ribbon cable connector from the MXF wire feed unit to the function panel.

#### MXF 65

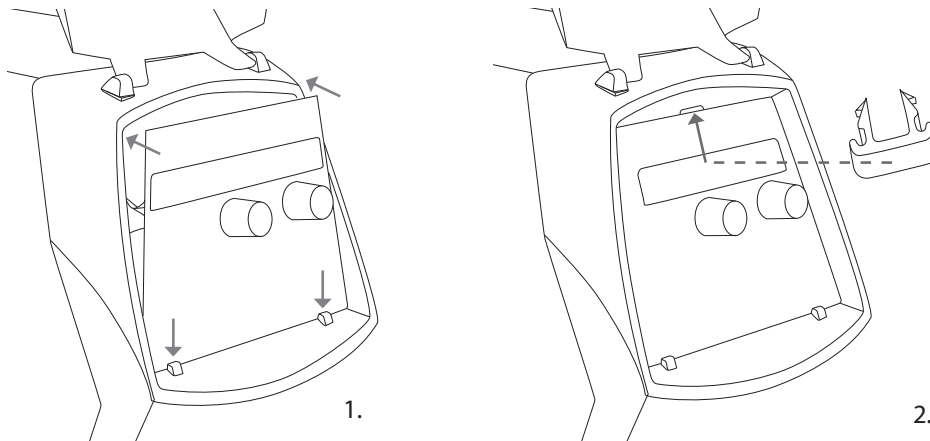

1. Place the bottom edge of the panel behind the securing clips on the machine. Remove the fixing pin from the top edge with, for example, a screwdriver. Then gently push the upper part of the panel into place. Make sure that the cables do not get damaged, continue gently pushing the upper part of the panel until it clips into place.
2. Finally secure the panel into place with the additional black plastic security clip provided (MXF 65 only). Ensure that the clip is positioned correctly. You will notice that the clip does not seat snugly if it's positioned upside down.


#### MXF 63 + MXF 67

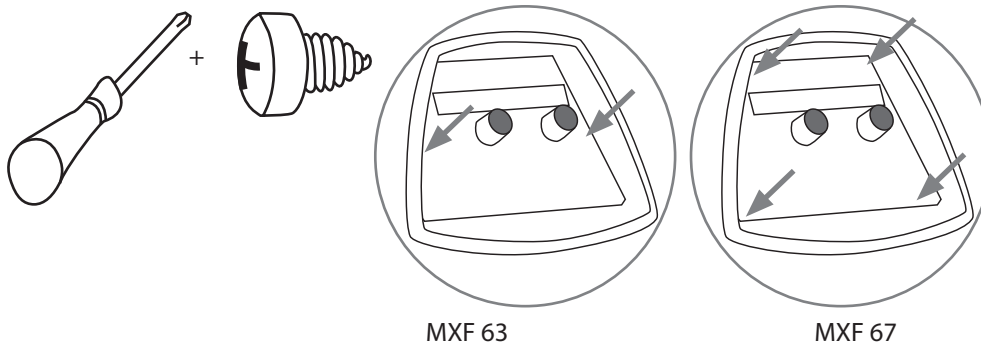

MXF 63

MXF 67

## 2.2 Functions of MR 200 and MR 300 panel

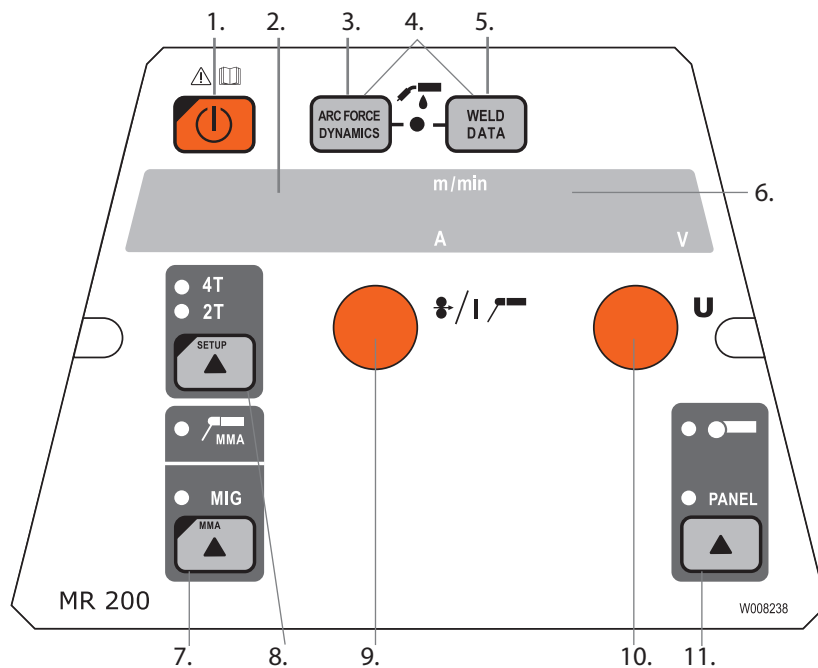

1. ON/OFF button
2. a) Wire feed speed/welding current display  
b) Selected SETUP entry display
3. MIG dynamics/MMA Arc Force selection
4. Selection of air/liquid cooled MIG gun
5. Weld data: Show last used welding parameters on displays
6. a) Welding voltage display  
b) Adjustable parameters display
7. Selection of MIG/MMA process
8. a) Selection of switching logic: 2T/4T  
b) Long press: Setting the basic parameters (SETUP)
9. a) Adjustment of wire feed speed  
b) Adjustment of MMA current  
c) Selection of SETUP parameter
10. a) Welding voltage adjustment  
b) Adjustment of MIG dynamics  
c) Adjustment of SETUP parameters
11. Manual control/remote control unit selection

**NOTE!** With MR 200 and MR 300 panels 'Wire Inch' and 'Gas Test' buttons should be used from the inside of the wire feed unit.

## 2.3 MR 200 and MR 300 operations



### ON/OFF (1)

The wire feed unit remains in the OFF position when the power source is switched on, thus preventing start-up. 'OFF' is shown on the display.

When the ON/OFF button is pressed for more than 1 second, the unit starts up. The unit is now ready for welding and will automatically return back to its previous position, before the power was cut off. The wire feed unit starts up also by pressing three (short) times the switch of the welding gun.

### Basic settings and displays

The wire feed speed is set via left potentiometer (control knob) and the value is shown on the left display. The welding voltage is set via right potentiometer (control knob) and the value is shown on the right display.

During welding, the left display shows the actual welding current value and the display on the right shows the welding voltage.

With electrode welding (MMA) the welding current value is set via the potentiometer and the value is shown on the left display. The display on the right shows the idling voltage of the power source. During welding the left display shows the actual welding current value and the display on the right shows the welding voltage.

When the MIG dynamics adjustment is activated with Arc Force/Dynamics button the Mig dynamics value is adjusted via right potentiometer (control knob) (see the information on adjustment of MIG dynamics).

### Adjustment of MIG dynamics/Arc Force (3)



With MIG welding dynamics adjustment is influenced on welding stability and spatter amount. Zero setting is recommended basic setting. Values  $\rightarrow$  min (-9 ... -1), softer arc for reduced spatter amount. Values  $\rightarrow$  max (1 - 9), harder arc for increased stability and when 100 % CO<sub>2</sub> shielding gas is used when welding steel.

With electrode welding Arc Force adjustment is influenced on welding stability. Adjustment is needed for using different types of electrodes. Control range (-9 ... 0) is commonly used for welding electrodes for stainless steel. Control range (0 - 9) is used for harder arc characteristic to increase stability, e.g. for welding with thicker basic electrodes and using lower current value than recommended. Factory set value (0) is a good general use for adjusting the roughness of the arc.

### Selection of air/liquid-cooled MIG gun (4)



Selection of air-cooled/liquid-cooled MIG gun is activated by pressing buttons 3 and 5 simultaneously (for more than 1 second). When 'Gas' is shown on the display, the welding equipment will assume that an air-cooled MIG gun has been connected. If the above buttons are pressed again, the text 'Cooler' appears on the display and the LED indicating liquid cooling selection lights up. In this case, the welding equipment will assume that a liquid-cooled MIG gun has been connected to the equipment. When liquid cooling is selected, the liquid cooling unit will start up in connection with the next equipment start-up.

The selection can also be made through the SETUP function.



### Weld data (5)



The weld data function is activated by pressing the button. The weld data function returns the welding current and voltage values to the displays that were in use during the last weld.


### Selection of welding process (7)



The welding process – normal MIG/MMA – can be chosen by the welding process selection button. In MIG welding wire feed speed and welding voltage are adjusted separately. Electrode welding (MMA) is selected by pressing the button for >1 second.

**NOTE!** When electrode welding is selected, the power source, the electrode holder connected to it and the MIG gun become energised (open circuit voltage).

### Selection of MIG operating procedure (8)

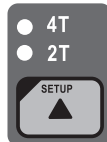

Gun trigger logic selection.  
Short Press: 2T / 4T selection.  
Long Press: Setup functions.

### Setup (8)



When the adjustment of SETUP parameters has been confirmed with long press of the SETUP button (8b), the adjustable parameter is selected via left potentiometer (control knob), and the name of the parameter is shown on the left display. Parameter value is selected from right potentiometer (control knob), and the value can be seen on the right display. (See the information on SETUP functions).

### Remote Selection Button (11)



Remote control unit is connected to the device by pressing button 11. The wire feed speed and welding voltage setting operations are performed via remote control. In this case, potentiometers 9 and 10 (control knobs) of the panel are disconnected.

## 2.4 Panel MR 200 and MR 300 Setup parameters

### Normal MIG welding Setup -parameters

Name of parameter	Name on display	Parameter values	Factory setting	Description
Pre Gas Time	PrG	0.0 – 9.9 s	0,0 s	Pre gas time in seconds
Post Gas Time	PoG	0.0 – 9.9 s	Aut	Post gas time in seconds or automatically according to welding current (Aut)
Creep Start Level	CrE	10 – 170%	50 %	Percentage of wire feed speed: 10 % slowed start 100 % = no creep start function 170 % accelerated start
Start Power	StA	-9 ... +9	0	Strength of start pulse
Post Current Time	PoC	-9 ... +9	0	Post current
Arc Voltage	Ard	OFF, on	OFF	on: Display shows arc voltage OFF: Display shows pole voltage
Cable Length	CAb	std, 5 – 80m	std	Cable loss is calculated for optimal arc control and for the Arc Voltage display

### Common Setup -parameters for MIG processes

Name of parameter	Name on display	Parameter values	Factory setting	Description
Device Address	Add	3 or 6	3	Wire feeder bus address
Using features of PMT Gun	Gun	OFF, on	on	on = PMT gun OFF = other gun
Gas Guard Connected	GG	no, YES	on	Implementation of gas guard
LongSystem Mode	LSY	OFF, on	OFF	on: Gives optimum welding characteristics with long welding cables
Code Entry	Cod	---, Ent	---	Entering license codes manually: 1. Adjust right potentiometer to ('Ent'). 2. Press REMOTE. 3. Set code with right potentiometer. 4. Choose next with left potentiometer. 5. Go back to point 3, until all codes have been set. 6. Approve by pressing REMOTE. ('Suc cEs')
Water Cooler	Coo	OFF, on	on	Enables water cooler
Wire Inch Stop	Inc	OFF, on	on	OFF = Stops wire inch in case arc does not ignite on = Feeds wire as long as the welding gun start switch is pressed.
Auto Wire Inch	Aln	OFF, on	on	SuperSnake Automatic Wire Inch function. Wire Inch button runs the filler wire from the wire feeder up to the SuperSnake.
Demo Licence Time	dEt	3-h, 2-h, **', **'', OFF		The remaining time for the WiseDemo licence (readable value only). 3-h = max. 3 hours left 2-h = max. 2 hours left **' = ** minutes left **'' = ** seconds left OFF = Demo period has expired.

<b>Restore Factory Settings</b>	FAC	OFF, PAn, ALL	OFF	Control panel reset function. OFF = No reset PAn = Settings will be restored, but memory channels remain unchanged ALL = All settings will be restored to factory values.
---------------------------------	-----	---------------	-----	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

#### Setup-parameters for MMA welding

Name of parameter	Name on display	Parameter values	Factory setting	Description
<b>Start Power</b>	StA	-9 ... +9	0	Strength of start pulse
<b>Device Address</b>	Add	3 or 6	3	Wire feeder bus address
<b>Code Entry</b>	Cod	---, Ent	---	Entering license codes manually: 1. Adjust right potentiometer to ('Ent'). 2. Press REMOTE. 3. Set code with right potentiometer. 4. Choose next with left potentiometer. 5. Go back to point 3, until all codes have been set. 6. Approve by pressing REMOTE. ('Suc cEs')
<b>Restore Factory Settings</b>	FAC	OFF, PAn, ALL	OFF	Control panel reset function. OFF = No reset PAn = Settings will be restored, but memory channels remain unchanged ALL = All settings will be restored to factory values

### 3. FASTMIG ERROR CODES

The existence of possible faults in the equipment is investigated in connection with each wire feed unit start-up. If a fault is detected, the fault in question will be indicated as an 'Err' message on the panel display.

#### **Error code examples:**

##### **Err 2: Undervoltage**

The device has stopped because it has detected a mains undervoltage that disturbs welding. Check the quality of the supply network.

##### **Err 3: Overvoltage**

The device has stopped because dangerously high temporary voltage surges or a continuous over-voltage has been detected in the electric network. Check the quality of the supply network.

##### **Err 4: Power source is overheated**

The power source has overheated. The cause may be one of the following:

- The power source has been used for a long time at maximum power.
- The circulation of cooling air to the power source is blocked.
- The cooling system has experienced a failure.

Remove any obstacle to air circulation, and wait until the power source fan has cooled down the machine.

##### **Err 5: Water unit alarm**

The water circulation is blocked. The cause may be one of the following:

- Congestion or disconnection in the cooling pipeline
- Insufficient cooling liquid
- Excessive cooling liquid temperature

Check the circulation of the cooling liquid and the air circulation of the water unit.

##### **Err 54: No data communication from power source**

The data transmission between the power source and the wire feed unit has been cut off or is defective. Check the extension lead and connections.

##### **Err 55: Power source is busy**

The communication channel is busy. The power source is being used by another wire feed unit or the programming for some other device in the channel (e.g. control panel) is in progress.

##### **Err 61: The water unit is not found**

Water unit is not connected to the equipment or there is a connection fault.

Connect up the water unit or change the setting of the unit to air-cooled, if you are using a air-cooled welding gun

##### **Err 153: Overheating of liquid-cooled PMT gun**

When starting to weld or during welding, the overheat protection on the liquid-cooled MIG welding gun has activated. Check that there is sufficient liquid in the cooling unit and that air is circulating freely through it. Ensure that liquid is circulating freely through the cooling hoses.

##### **Err 154: Overloading of the wire feed motor**

The welding has been interrupted because the loading of the wire feed motor has risen to a high level. The cause of this could be a blockage of the wire line. Check the wire conduit, contact tip and feed rolls.

##### **Err 155: Warning of the wire feed unit overloading**

The wire feed motor load level has risen. The cause could be dirty wire conduits or a gun cable twisted into sharp curves. Check the state of the gun and clean the wire line if necessary

##### **Err 165: Gas guard alarm**

Gas guard function has worked, because the pressure of gas has decreased. Possibly reasons: Gas is unconnected to the wire feeder. Gas has been ran out, gas hose is leaking or there is no pressure enough in the gas web. Connect the gas to the wire feeder, check gas hose and the pressure of the gas web.

**Err 171: Configuration not found for the device**

The equipment's internal data transmission has been cut off. The optional features cannot be used. Turn off the machine, detach the welding gun and re-start the machine. If an error code does not appear in the display, the fault lies in the welding gun. If this error code pertains, contact maintenance.

**Err 172: A wrong configuration code has been supplied**

License activation with DataGun has failed. Turn off the machine, detach DataGun and restart the machine. Reconnect DataGun. If this error code recurs, contact maintenance.

**Err 201: Use of PMT gun is prevented**

You try to use the PMT welding gun, but the necessary settings have not been entered into the machine's control panel. Select 'PMT gun' from the control panel SETUP menu, if you wish to use it. This fault can also occur with other guns, if the trigger contacts are bad or dirty.

**Err 221: Two wire feeders connected with the same device address.**

Two wire feed units have the same device address. Define different addresses for the devices as follows:

1. Press any button on either control panel (except the ESC button). "Add" (Device Address) is displayed.
2. Change the device address using the right-hand control knob.
3. Return to normal status by pressing again any button on the control panel.

The machines will return to normal status within 15 seconds.

**Other error codes:**

The machine can show codes not listed here. In the event of an unlisted code appearing, contact an authorised Kemppi service agent and report the error code shown.

## 4. DISPOSAL



Do not dispose of electrical equipment with normal waste!

In observance of European Directive 2002/96/EC on waste electrical and electronic equipment, and its implementation in accordance with national law, electrical equipment that has reached the end of its life must be collected separately and taken to an appropriate environmentally responsible recycling facility.

The owner of the equipment is obliged to deliver a decommissioned unit to a regional collection centre, per the instructions of local authorities or a Kemppi representative. By applying this European Directive you will improve the environment and human health.

## 5. ORDERING NUMBERS

FastMig MR 200	MXF 63	6136100
FastMig MR 300	MXF 65, MXF 67	6136200

**KEMPPI OY**

Kempinkatu 1  
PL 13  
FIN-15801 LAHTI  
FINLAND  
Tel +358 3 899 11  
Telefax +358 3 899 428  
export@kemppi.com  
www.kemppi.com

**Kotimaan myynti:**

Tel +358 3 899 11  
Telefax +358 3 734 8398  
myynti.fi@kemppi.com

**KEMPPI SVERIGE AB**

Box 717  
S-194 27 UPPLANDS VÄSBY  
SVERIGE  
Tel +46 8 590 783 00  
Telefax +46 8 590 823 94  
sales.se@kemppi.com

**KEMPPI NORGE A/S**

Postboks 2151, Postterminalen  
N-3103 TØNSBERG  
NORGE  
Tel +47 33 346000  
Telefax +47 33 346010  
sales.no@kemppi.com

**KEMPPI DANMARK A/S**

Literbuen 11  
DK-2740 SKOVLUNDE  
DANMARK  
Tel +45 4494 1677  
Telefax +45 4494 1536  
sales.dk@kemppi.com

**KEMPPI BENELUX B.V.**

NL-4801 EA BREDA  
NEDERLAND  
Tel +31 765717750  
Telefax +31 765716345  
sales.nl@kemppi.com

**KEMPPI (UK) LTD**

Martti Kemppi Building  
Fraser Road  
Priory Business Park  
BEDFORD, MK44 3WH  
UNITED KINGDOM  
Tel +44 (0)845 6444201

Telefax +44 (0)845 6444202  
sales.uk@kemppi.com

**KEMPPI FRANCE S.A.S.**

65 Avenue de la Couronne des Prés  
78681 EPONE CEDEX  
FRANCE  
Tel +33 1 30 90 04 40  
Telefax +33 1 30 90 04 45  
sales.fr@kemppi.com

**KEMPPI GMBH**

Perchstetten 10  
D-35428 LANGGÖNS  
DEUTSCHLAND  
Tel +49 6 403 7792 0  
Telefax +49 6 403 779 79 74  
sales.de@kemppi.com

**KEMPPI SPÓŁKA Z O.O.**

Ul. Borzymowska 32  
03-565 WARSZAWA  
POLAND  
Tel +48 22 7816162  
Telefax +48 22 7816505  
info.pl@kemppi.com

**KEMPPI AUSTRALIA PTY LTD**

13 Cullen Place  
P.O. Box 5256, Greystanes NSW 2145  
SMITHFIELD NSW 2164  
AUSTRALIA  
Tel. +61 2 9605 9500  
Telefax +61 2 9605 5999  
info.au@kemppi.com

**OOO KEMPPИ**

Polkovaya str. 1, Building 6  
127018 MOSCOW  
RUSSIA  
Tel +7 495 240 84 03  
Telefax +7 495 240 84 07  
info.ru@kemppi.com

**ООО КЕМППИ**

ул. Полковная 1, строение 6  
127018 Москва  
Tel +7 495 240 84 03  
Telefax +7 495 240 84 07  
info.ru@kemppi.com

**KEMPPI, TRADING (BEIJING) COMPANY LTD**

Unit 105, 1/F, Building #1,  
No. 26 Xihuan South Rd.,  
Beijing Economic-Technological Development  
Area (BDA),  
100176 BEIJING  
CHINA  
Tel +86-10-6787 6064  
+86-10-6787 1282  
Telefax +86-10-6787 5259  
sales.cn@kemppi.com

**肯倍贸易(北京)有限公司**

中国北京经济技术开发区  
西环南路26号  
1号楼1层105室(100176)  
电话 : +86-10-6787 6064/1282  
传真 : +86-10-6787 5259  
sales.cn@kemppi.com

**KEMPPI INDIA PVT LTD**

LAKSHMI TOWERS  
New No. 2/770,  
First Main Road,  
Kazura Garden,  
Neelankarai,  
CHENNAI - 600 041  
TAMIL NADU  
Tel +91-44-4567 1200  
Telefax +91-44-4567 1234  
sales.india@kemppi.com

**KEMPPI WELDING SOLUTIONS SDN BHD**

No 12A, Jalan TP5A,  
Taman Perindustrian UEP,  
47600 Subang Jaya,  
SELANGOR, MALAYSIA  
Tel +60 3 80207035  
Telefax +60 3 80207835  
sales.malaysia@kemppi.com

www.kemppi.com

 **KEMPPИ**  
The Joy of Welding

1903490  
1515