

MASTERTIG
MLS2500

MASTERTIG
MLS2503

MASTER
MLS3500

MASTER
MLS2503

MASTERTIG
MLS3500

MASTERTIG
MLS3503

MASTER
MLS2500

MASTER
MLS3503

MASTERCool
10

MASTERCool
12



CONTENTS

1.	PREFACE	3
	1.1. Introduction	3
	1.2. Product introduction	3
	1.3. Operation safety	3
2.	INSTALLATION	4
	2.1. Removal from packaging	4
	2.2. Locating the machine	4
	2.3. Serial number	4
	2.4. Installation and main parts	4
	2.5. Installation of the panel	5
	2.6. Mains connection	5
	2.7. Welding cable connections	6
	2.7.1. Choosing welding polarity in MMA welding	6
	2.7.2. Earthing	6
	2.8. Cooling unit (Mastercool 10, Mastercool 12)	6
	2.9. Shield gas	7
	2.9.1. Installation of gas bottle	7
3.	OPERATION	8
	3.1. Welding processes	8
	3.1.1. MMA welding	8
	3.1.2. TIG welding	8
	3.1.3. Synergetic Pulsed TIG welding	8
	3.1.4. Long Pulsed TIG welding	8
	3.2. Operation functions	8
	3.2.1. Power source	8
	3.2.2. Function panels (MTL, MTX, MTZ, MTM, MEL, MEX)	8
	3.2.2.1. Indicator lights	9
	3.2.2.2. MMA welding panel MEL	9
	3.2.2.3. MMA welding panel MEX	10
	3.2.2.4. TIG welding panel MTL	11
	3.2.2.5. TIG welding panel MTX	13
	3.2.2.6. TIG welding panel MTZ	14
	3.2.2.7. TIG welding panel MTM	15
	3.2.3. Saving welding settings (MTM)	16
	3.2.4. Adopting the saved settings	16
	3.2.5. Remote control memory channels	16
	3.2.6. SETUP functions	16
	3.2.7. Foot pedal control R11F	17
	3.3. Cooling unit operation (Mastercool 10, Mastercool 12)	17
	3.4. Storage	17
4.	MAINTENANCE	18
	4.1. Regular maintenance	18
	4.1.1. Every sixth months	18
	4.1.2. Service contract	18
	4.2. Troubleshooting	18
	4.3. Disposal of the machine	19
5.	ORDERING NUMBERS	19
6.	TECHNICAL DATA	21

1. PREFACE

1.1. INTRODUCTION

Congratulations on having purchased a KEMPPI product. Properly installed and used Kemppi products should prove to be productive machines requiring a small amount of regular maintenance. This manual is to give you a good understanding of the equipment and its safe operation. It also contains maintenance information and technical specifications. Read this manual completely from front to back before installing, operating or maintaining the equipment for the first time. For further information on Kemppi products please contact us or your nearest Kemppi distributor.

The specifications and designs presented in this manual are subject to change without prior notice.

In this document, for danger to life or injury the following symbol is used:



Read the warnings carefully and follow the instructions. Please also study the Operation safety instructions and respect them when installing, operating and servicing the machine.

1.2. PRODUCT INTRODUCTION

Kemppi Master 2500, 2503, 3500 and 3503 MLS™ is a MMA welding machine designed for industrial use and for welding all kinds of covered electrodes, including difficult-to-weld types such as cellulose electrodes. The equipment consists of power source, welding cables and function panel.

Kemppi Mastertig 2500, 2503, 3500 and 3503 MLS™ is a TIG welding system especially designed for industrial use and for welding e.g. stainless steel materials. The equipment consists of a power source, function panel, TIG welding torch, ground cable and an optional cooling unit. The cooling unit (Mastercool 10, Mastercool 12) is used in water-cooled TIG welding.

The power source is a multifunctional machine for demanding professional use for MMA, TIG and pulsed TIG welding with direct current. The power source is controlled with IGBT transistors with a frequency of approximately 20 kHz, and the operational functions with a microprocessor. The welding torch can be either water-cooled or gas-cooled.

1.3. OPERATION SAFETY

Please study these Operation safety instructions and respect them when installing, operating and servicing the machine.

Welding arc and spatters

Welding arc hurts unprotected eyes. Be careful also with reflecting arc flash. Welding arc and spatter burn unprotected skin. Use safety gloves and protective clothing.

Danger for fire or explosion

Pay attention to fire safety regulations. Remove flammable or explosive materials from welding place. Always have sufficient fire-fighting equipment wherever you are welding. Be prepared for hazards in special welding jobs, e.g. for danger of fire or explosion when welding container-type work pieces. Note! Fire can break out from sparks even several hours after the welding work has been finished!

Mains voltage

Never take welding machine inside a work piece (e.g. container or truck). Do not place welding machine on a wet surface. Always check cables before operating the machine. Change damaged cables without delay. Damaged cables may cause an injury or start a fire. Connection cable must not be crushed, it must not touch sharp edges or hot work pieces.

Welding power circuit

Isolate yourself by using proper protective clothing, do not wear wet clothing. Never work on a wet surface or use damaged cables. Do not put TIG torch or welding cables on welding machine or on other electric equipment. Do not press TIG torch switch if the torch is not directed towards the work piece.

Welding fumes

Take care that there is sufficient ventilation during welding. Take special safety precautions when welding metals which contain lead, cadmium, zinc, mercury or beryllium.

Lifting the equipment

Always remove gas bottle before lifting.

2. INSTALLATION

2.1. REMOVAL FROM PACKAGING

The equipment is packed in durable packages designed especially for it. However, it is necessary to check the equipment before using it to make sure that the equipment or any part of it has not got damaged during transportation. Also check that the delivery corresponds to your order and that you have received all necessary instructions for installing and operating the equipment. The packaging material is recyclable.

2.2. LOCATING THE MACHINE

Place the machine on a horizontal, stable and clean ground. Protect the machine from rain and direct sunshine. Check that there is enough space for cooling air circulation in front of and behind the machine.

2.3. SERIAL NUMBER

Serial number of the machine is marked on the rating plate. The serial number is the only proper means of identifying parts for a specific product. It is important to make correct reference to the serial number of the product when making repairs or ordering spare parts.

2.4. INSTALLATION AND MAIN PARTS



Front of machine

1. Function panel
2. Remote control connector
3. TIG torch control connector, not in MMA version
4. Shield gas and current connector for TIG torch, not in MMA version
5. (+) connector for electrode holder or earth cable, in TIG welding for earth cable
6. (-) connector for earth cable or electrode holder in MMA welding (stick welding)

Markings for (+/-) poles on the machine front are embossed.



Rear of machine

1. Mains switch
2. Snap connector for gas



Torch



Installing gas-cooled torch



Installing water-cooled torch

2.5. INSTALLATION OF THE PANEL



1.



2.

1. Fasten the cable connectors of the function panel to the power source (2 pieces).
2. Place the bottom edge of the panel behind the securing clips on the machine. Then gently push the upper part of the panel into place. Make sure that the cables do not get damaged, continue gently pushing the upper part of the panel until it clips into place.

2.6. MAINS CONNECTION



Only an authorised electrician is allowed to install mains cable and plug!

The power source is equipped with a 5-meter mains cable without plug. The plug may be installed by an authorised electrician only. The fuse and cable sizes are given in the Technical data at the end of this manual.

2.7. WELDING CABLE CONNECTIONS

2.7.1. Choosing welding polarity in MMA welding

You can change the welding polarity by choosing (+) or (-) cable connector.

2.7.2. Earthing

If possible, always fasten the earth clamp of return current cable directly onto work piece.

1. Clean contact surface of earth clamp from paint and rust.
2. Fasten clamp properly, so that contact surface is as large as possible.
3. Check that clamp is fastened firmly.

2.8. COOLING UNIT (MASTERCOOL 10, MASTERCOOL 12)



Cooling liquid is injurious! Avoid also contact with skin or eyes. In case of injury, seek for medical advice.

Cooling unit Mastercool 10 and Mastercool 12 together with TIG torch of Kemppi's TTC-W range enables TIG welding with water-cooled torch.

The cooling unit is installed beneath the power source with screws. Electrical connections are on the bottom of power source. Fill the reservoir with a 20 - 40 % mixture of glycol and water, or with any other suitable antifreeze. The capacity of the reservoir is 3 litres.

Mastercool 10:

Mastertig 2500 MLS™

Mastertig 3500 MLS™

Mastercool 12:

Mastertig 2503 MLS™

Mastertig 3503 MLS™



Installation of cooling unit




2.9. SHIELD GAS



Handle gas bottle with care. There is a risk for injury if gas bottle or bottle valve is damaged!

Use inert gases such as argon, helium or argon-helium mixture as shield gas for TIG welding. Make sure that the gas flow regulator is suitable for the gas type used. The flow rate is set according to the welding current, joint form and the size of the electrode. A suitable flow rate is normally 8 – 10 l/min. If the gas flow is not suitable the welded joint will be porous. Spark ignition becomes more difficult if the gas flow is too high. Contact your local Kemppi dealer for choosing gas and equipment.

2.9.1. Installation of gas bottle

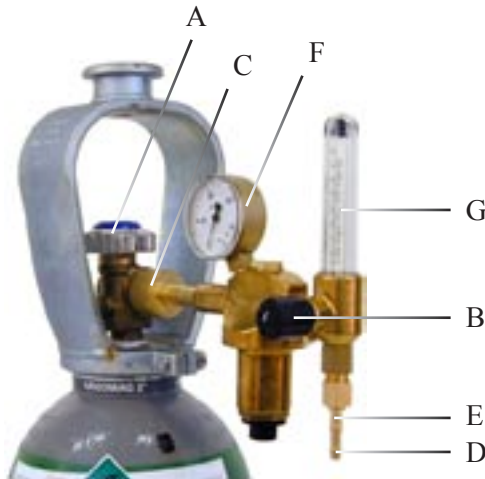

Parts of gas flow regulator

- A Gas bottle valve
- B Pressure regulation screw
- C Connecting nut
- D Hose spindle
- E Jacket nut
- F Gas bottle pressure meter
- G Gas hose pressure meter

Always fasten gas bottle properly in vertical position in a special holder on the wall or on a carriage. Remember to close gas bottle valve after having finished welding.

The following installation instructions are valid for most gas flow regulator types:

1. Step aside and open the bottle valve (A) for a while to blow out possible impurities from the bottle valve. Note! Watch out for the gas flow.
2. Turn the pressure regulation screw (B) of the regulator until no spring pressure can be felt.
3. Close needle valve if there is one in the regulator.
4. Install the regulator on bottle valve and tighten connecting nut (C) with a wrench.
5. Install hose spindle (D) and jacket nut (E) into gas hose and tighten with hose clamp.
6. Connect one end of the hose with the regulator and the other end with the power source. Tighten the jacket nut.
7. Open bottle valve slowly. Gas bottle pressure meter (F) shows the bottle pressure. Note! Do not use the whole contents of the bottle. The bottle should be filled when the bottle pressure is 2 bar.
8. Open needle valve if there is one in the regulator.
9. Turn regulation screw (B) until hose pressure meter (G) shows the required flow (or pressure). When regulating flow amount, the power source should be switched on and the gun switch pressed simultaneously.

Close bottle valve after having finished welding. If the machine will be out of use for a long time, unscrew the pressure regulation screw.

3. OPERATION



Welding in places presenting an immediate fire or explosion hazard is forbidden!

Welding fumes may cause injury, take care of sufficient ventilation during welding!

3.1. WELDING PROCESSES

3.1.1 MMA welding

MMA welding, as well as carbon arc gouging, is possible with all Master MLS and Mastertig MLS power sources with all MLS panel versions when switched to MMA process.

3.1.2 TIG welding


Mastertig MLS power sources are designed especially for TIG welding. They are equipped with HF spark ignition and versatile panel functions depending on the panel used. The panels predominantly for TIG welding are MTL, MTX, MTZ and MTM. Also the MEL and MEX panel on Master MLS power source can be used for TIG welding with contact ignition.

3.1.3 Synergetic Pulsed TIG welding (a)

MTX, MTZ and MTM panels include the synergetic pulsed TIG process, in which you only need to adjust the welding current while other pulse parameters are programmed. Pulsing frequency is high, which guarantees concentrated arc and increased welding speed.

3.1.4 Long Pulsed TIG welding (b)

This method gives you the possibility to adjust all pulse parameters. Weld pool control is also easier. Long pulsed TIG welding is included in MTX, MTZ and MTM panels.

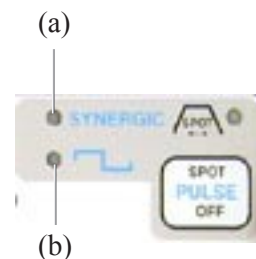

3.2. OPERATION FUNCTIONS

3.2.1. Power source



Always switch the machine on and off from main switch. Do not use the mains plug for switching!




Never watch the arc without a proper face shield designed for arc welding! Protect yourself and the surroundings against welding arc and hot spatters!

3.2.2. Function panels

Before welding starts, welding settings suitable for the work piece are chosen with the function panel. See 3.1. Welding processes.

The Kemppi Multi Logic System, MLS™, allows you to select from different function panels according to your welding application. MEL and MEX panels are designed for MMA welding. MTL, MTX, MTZ and MTM panels are for TIG welding with basic functions, or with pulsed TIG, 4T-LOG, or MINILOG control of welding current, or with memory channels. See also 3.1. Welding processes.

3.2.2.1. Indicator lights

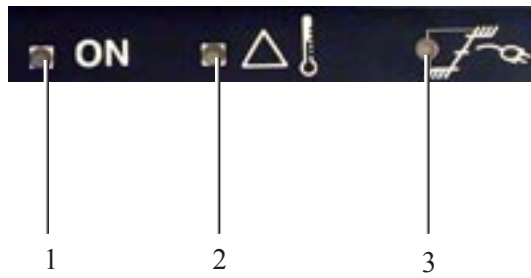


1. Power On
2. Thermal overload of power source
3. Wrong mains voltage, over or under-voltage

3.2.2.2. MMA welding panel MEL



1. Remote/local control switch
2. Welding current potentiometer
3. Contact TIG welding
4. MMA welding
5. Arc force
6. Hot start
7. Digital display and amperage/voltage switch
8. Welding current table


3.2.2.3. MMA welding panel MEX

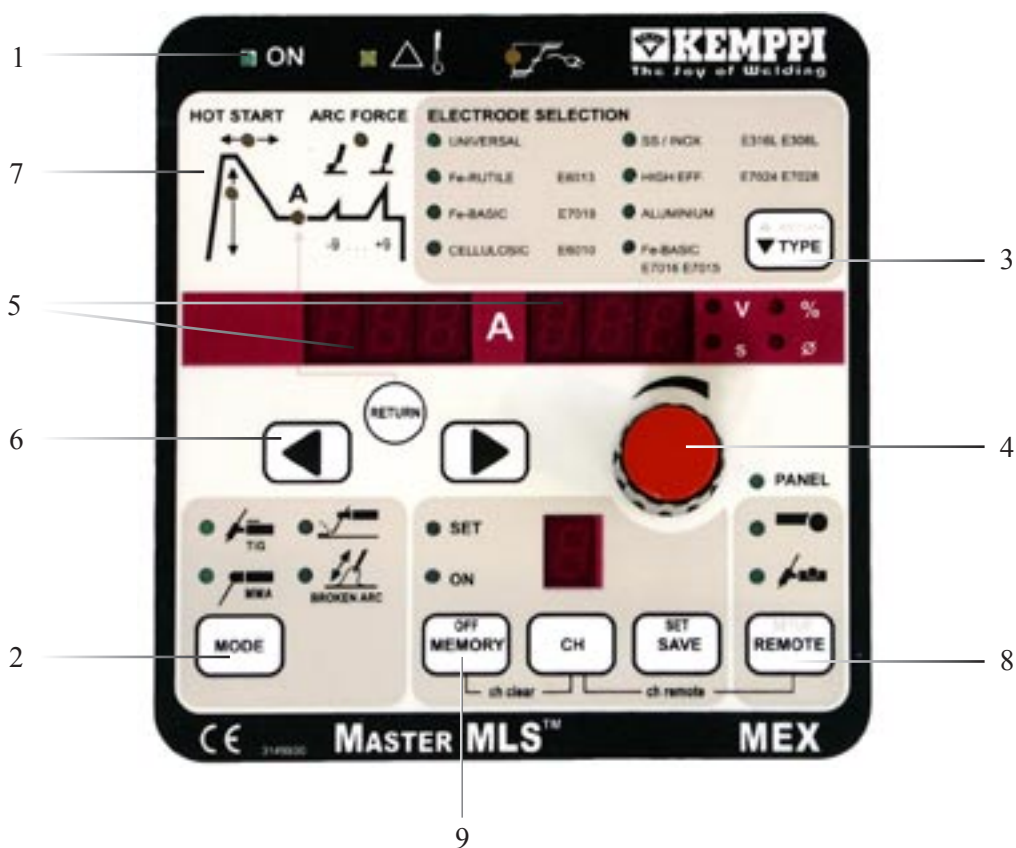

MEX panel is available separately. The functions of MEX panel are described in the operating manual delivered with the panel.

1. Indicator lights: Main switch, overheating, wrong mains voltage
2. MODE button for welding method selection: MMA, contact TIG, carbon arc gouging, broken arc
3. Selection of electrode type
4. Potentiometer for regulation of welding current and other parameters
5. Displays of welding current and other parameters (A, V, s, mm)
6. Selection of welding parameter to be regulated (arrow button to the left / to the right, focusing (RETURN))
 - Hot start regulation (HOT START)
 - Welding current (A)
 - Arc force control dynamics (ARC FORCE)
7. Figure indicating selection of welding parameter: HOT START, A, ARC FORCE
8. Selection of remote control / SETUP function
9. Memory functions

3.2.2.4. TIG welding panel MTL - basic functions

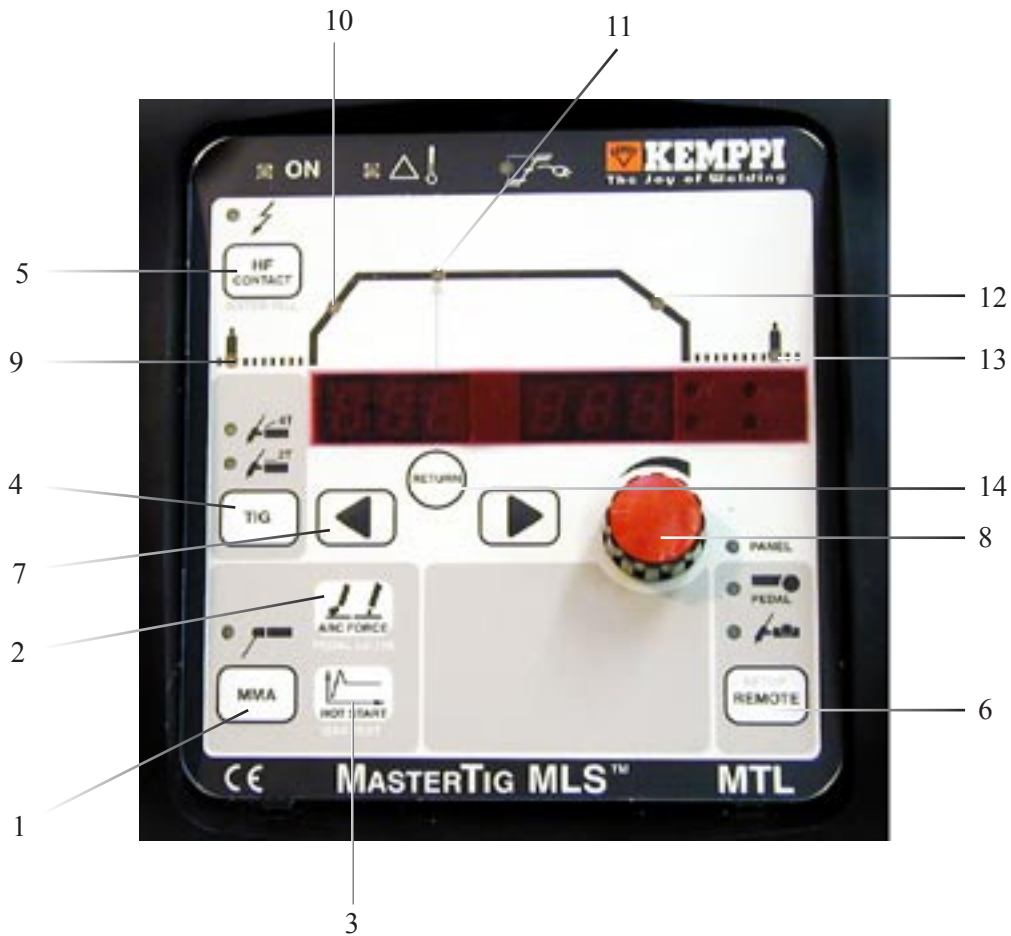

1. Selection of MMA welding
2. Selection of arc force (MMA) and pedal low/high (minimum and maximum welding current) displays and regulation (TIG welding)
3. Selection of hot start (MMA) and gas test (TIG welding)
4. Selection of TIG welding, 4T and 2T functions of torch switch
5. Selection of HF/contact and water fill function
6. Selection of panel, foot pedal and remote control
7. Selection of welding parameters
8. Adjustment of welding parameters
9. Pre-gas 0 - 10 s
10. Upslope 0 - 10 s
11. Welding current
12. Downslope 0 - 15 s
13. Post-gas 1 - 30 s
14. Return to welding current

1. MMA

Select MMA welding by pressing the selection button of MMA welding. The led is lit when MMA is on.

2. Arc force

Press the arc force button and you will see the numerical value corresponding to the MMA dynamics in the display. Factory setting for all electrode types is zero. You can change the value by turning the pulse potentiometer. If numerical value is adjusted negative (-1...9) the arc is softened, and the amount of spatter decreases when welding at the upper end of the recommended current range of the electrode. On the positive side (1...9) the arc is rough.

In TIG mode, you can select the max. and min. current for the foot pedal (PEDAL LO/HI).

3. Hot start

When pressing the hot start button, you will see on the display the numerical value corresponding to the MMA hot start pulse. You can adjust the value by turning the potentiometer. In TIG mode you can select gas test function.

4. TIG welding is selected

4. Welding torch switch 2 sequence function

Gas flow starts when the torch switch is pressed. After preset pre-gas time welding starts, and current will rise to the welding level within the up-slope time. Release the torch switch, and the current starts to drop, and after the selected down-slope time the arc is broken. After this, the shield gas will flow for the time selected.

4. Welding torch switch 4 sequence function

Gas flow starts when the torch switch is pressed. Release the torch switch. The ignition spark ignites the arc, and the current will rise to the welding level within the up-slope time. Press the torch switch down, and the welding continues. Release the torch switch, and the current starts to drop and after the selected down-slope time the arc is broken. After this, the shield gas will flow for the time selected.

5. HF/contact ignition in TIG welding (water fill)

TIG arc can be started either with high frequency (HF) or without (contact ignition). HF ignition is chosen by pressing the HF CONTACT button (5) to turn on the HF light.

If you use water-cooled torch you can fill it with water by pressing the HF CONTACT button for more than 2 seconds.

6. Remote control

If you choose to adjust the welding current with a remote control unit you need to connect the unit and select the REMOTE button. The panel led switches off and you can select the unit (R10, wireless remote control R11T for MMA welding, or foot pedal control R11F). There is an automatic recognition of remote control units with potentiometers and only the symbol of a connected unit can be chosen. The foot pedal control works only in 2T mode.

7., 8. and 14. Adjustment of parameters

To select TIG welding parameters you only need to use two buttons: arrow-left and arrow-right. Adjustment is done with the potentiometer. When pressing the RETURN button, adjustment of parameters goes straight to welding current. The display shows automatically numeric values and the units of the parameters. When you adjust the parameters, you can see the value on the numerical display. After 10 seconds, the display will return to the welding current.

3.2.2.5. TIG welding panel MTX - pulsed TIG functions



1. 4T-LOG
2. Selection for spot, synergetic quick pulse and long pulse
3. Search arc 10 – 80 % of welding current
4. Pulse current 10 A – max.
5. Pulse ratio 10 – 70 % of pulse time
6. Frequency 0.2 – 300 Hz
7. Base current 10 – 70 % of pulse current
8. Spot time 0 – 10 s
9. Tail arc 10 – 80 % of welding current

1. Welding torch switch 4T-LOG function (only MTX panel)

When torch switch is pressed current goes to search arc; after the switch is released current goes to welding current within the upslope time. When the switch is pressed again, current goes to downslope and then to the tail arc. Current stops when the switch is released.

2. Spot

Spot function is practical when welding a definite spot with TIG. It can be used both in 2T and 4T mode. Enter the spot time adjustment by pressing arrow button, and when the led is lit you can choose the spot time needed by turning the pulse potentiometer.

2. Synergetic quick pulse

Press the PULSE button twice and the synergetic light turns on. Pulse parameters are calculated automatically when average welding current is selected. Other pulse selections are not necessary.

2. Long pulse

Long pulse method gives you the possibility to adjust all pulse parameters (pulsing frequency, pulse ratio, pulse current and pause current). You can also adjust the welding current, in which case you receive a new pulse current value. Pulse ratio and pause current percentage remain constant. When you adjust the pulse ratio, pulse current or pause current, the new average welding current value is shown on the display.

3.2.2.6. TIG welding panel MTZ - pulsed TIG and MINILOG function



1. Minilog
2. Minilog 10 – 90 % of welding current

1. MTZ Minilog

When torch switch is pressed current goes to search arc; after the switch is released current goes to welding current within the upslope time. With Minilog operation you can select from two current levels: the welding current and the Minilog current. You can move from one to the other by quickly pressing the torch switch. Press torch switch for 1 second, current goes to downslope and then to the tail arc. Current stops when the switch is released.

3.2.2.6. TIG welding panel MTM - pulsed TIG and MINILOG function with memory



1. Minilog
2. Selection of memory function
3. Selection of channel in memory function
4. Minilog 10 – 90 % of welding current
5. SAVE

1. Minilog operation

When torch switch is pressed gas flow starts. When you release the switch current goes to search arc. A quick press on the switch, and current goes to welding current within the upslope time. After another short press it goes to Minilog operation, and you can select from two current levels: the welding current and the Minilog current. You can move from one to the other by quickly pressing the torch switch. Press the torch switch for 1 second, release it and current goes to downslope.

3.2.3. Saving welding settings (MTM)

MTM panel has 10 memory channels for user settings. The selections are made in the MEMORY field. Not only welding parameters but also function selections can be saved in the memory. MMA welding values can also be stored in memory channels. Proceed as follows:

1. Press MEMORY button twice and if the SET light starts blinking the channel is free. If the channel is reserved the led will remain lit.
2. Select memory channel by pressing CH button.
3. Select the parameters and press SAVE button.
4. Press MEMORY button twice. ON led is lit.
5. Start welding and adjust settings if necessary.

If the saved settings need to be adjusted the led has to be moved from ON to SET position in order to select parameters. Press the SAVE button. It is also possible to save the currently used parameters by pressing SET when the memory function is in OFF state (no lights on). Channel is cleared if MEMORY and CH buttons are pressed simultaneously in SET mode.

3.2.4. Adopting the saved settings

1. Select MEMORY by pressing the button.
2. Select memory channel by pressing the CH button.
3. Start welding.

3.2.5. Remote control memory channels

Memory channels are selected by pressing simultaneously both REMOTE and CH button. With the remote control you can retrieve saved settings on memory channels.

3.2.6. SETUP functions

A so called SETUP state is included for modifying panel functions. You can enter the SETUP state by pressing the REMOTE (SETUP) button longer than normally. Exit is performed in the same way. You can select the function (see list below) by pressing the arrow buttons and then change the setting by turning the potentiometer.

Display	Function	Factory setting
A1	Upslope with constant time setting / gradient (steepness) setting	0 constant time
A2	Downslope with constant time setting / gradient (steepness) setting	0 constant time
A3	TIG antifreeze off / on	1 off
A4	MMA antifreeze off / on	1 on
A5	MMA hot start pulse non adaptive / adaptive	0 non adaptive
A6	Downslope cut off on / off	0 on
A7	MMA open circuit voltage 80V / 40V	0 80V
A8	2T downslope normal / cuts off by short switch action	0 normal
A9	Tacking automatics off / on	0 off
A10	Current at arc start steep / slightly sloped	0 steep
A11	Downslope linear / non-linear	0 linear
A12	MMA/TIG method selection with remote control off / on	0 off
A13	Search arc off / on	1 on
A14	Possibility to current freezing during downslope off / on	0 off
A15	Control of channels with torch up-down switch off / on	0 off

A16 Control of current with torch up-down switch always active / active only when selected with REMOTE button	0 always active
A17 Guard functions of cooling unit not activated / activated	1 activated
A18 Downslope for Minilog and 4T in MTM and MTL panels performed during long switch action / after switch operation (normal)	0 normal
A19 Cooling unit operates on forced control / automatic on/off control	0 automatic

3.2.7. Foot pedal control R11F

First read under “3.2.2.4. TIG welding panel MTL” point “6. Remote control” for installing the remote control ready for operation. Foot pedal R11F is used in TIG welding, and its control range is adjustable. The minimum value of control range is set with the panel potentiometer when the pedal is not pressed, display shows “LO”. Control range maximum is set similarly by pressing first the PEDAL LO/HI button on the panel, display shows “HI”. Welding is started with a light press on the pedal, the arc ignites to the set minimum current. Welding current goes to maximum when the pedal is pressed to the bottom. The arc is broken when the pedal is released. Adjust again if necessary.

3.3. COOLING UNIT OPERATION (MASTERCOOL 10, MASTERCOOL 12)

The operation of cooling units Mastercool 10 and Mastercool 12 is controlled by the power source. The cooling unit pump starts automatically when welding starts. Proceed as follows:

1. Start power source.
2. Check water level and input flow of the reservoir, add liquid if needed.
3. If you use a water-cooled torch you can fill it with water by pressing WATER FILL (HF CONTACT) button for more than 2 seconds.

The pump operates for 5 another minutes after welding has been finished to cool the water to the same temperature as in the machine surrounds. This reduces the need of service.

Thermal overload

The thermal overload light is lit, the machine stops and display shows COOLER when temperature control of the machine has detected cooling water overheating. The cooling unit fan cools down the water, and when the light goes out welding can be started again.

Water flow signal

Display shows COOLER when water flow is blocked.

3.4. STORAGE

The machine must be stored in a clean and dry room. Protect the machine from rain and direct sunshine in places where temperature exceeds +25 °C.

4. MAINTENANCE



Watch out for mains voltage when handling electric cables!

Degree and circumstances of machine utilisation should be taken into consideration when planning product maintenance. Careful use and preventive maintenance help to avoid unnecessary production disturbances and breaks. Check the condition of the welding and connection cables daily. Do not use damaged cables.

4.1. REGULAR MAINTENANCE

4.1.1. *Every sixth months*

NOTE! Disconnect the plug of the machine from the mains socket and wait for ca. 2 minutes (capacitor charge) before removing the casing plate.

The following maintenance operations should be carried out at least every sixth months:

- Electric connections of the machine - clean any oxidised parts and tighten any loose ones. NOTE! You must know the correct tension torques before you start repairing the connections.
- Clean the inner parts of the machine from dust and dirt e.g. with a soft brush and a vacuum cleaner. Do not use compressed air because there is the danger that the dirt is packed even more tightly in the gaps of the cooling profiles. Do not use a pressure washer.

Only an authorised electrician may repair the machine.

4.1.2. *Service contract*

KEMPPI service workshops make special service contracts with customers about regular maintenance. All parts are cleaned, checked and if necessary, repaired. Also the operation of welding machine is tested.

4.2. TROUBLESHOOTING

Power On light is not lit.

There is no power in the machine.

- Check mains fuses, replace blown fuses.
- Check mains cable and plug, replace defect parts.

The machine is not welding properly.

There are plenty of spatters during welding. Weld joint is porous or power supply is insufficient.

- Check welding settings and adjust if needed.
- Check gas flow and gas hose connection.
- Check that earth clamp is properly fastened and that earth cable has no defects. Change the position if necessary and replace defect parts.
- Check welding torch cable and connector. Tighten the connection and replace defective parts.
- Check the consumable parts of welding torch. Clean and replace defect parts.
- Check mains fuses, replace blown fuses.

Power source overheat indicator light is lit.

Power source is overheated.

- Check that there is enough free space behind the machine for cooling air circulation.
- Check cooling unit for water circulation, clean cooling unit filter and air grate. Add cooling liquid if necessary.

For further information and assistance, contact your nearest Kemppi service workshop.

4.3. DISPOSAL OF THE MACHINE

Kemppi machines are produced mainly of recyclable materials. Please deliver an old machine to be removed from service to a treatment plant where it is possible to separate the materials for recycling.

4.2. ORDERING NUMBERS

Master 2500 MLS	6104250
Master 2503 MLS	6102250
Welding cable 35mm ² , 2,5 m	6184301
Earth cable 25mm ² , 2,5 m	6184311
Electric plug 16 A, 5-poles	9770812
Master 3500 MLS	6104350
Master 3503 MLS	6102350
Welding cable 50mm ² , 2,5 m	6184501
Earth cable 50mm ² , 2,5 m	6184511
Electric plug 16 A, 5-poles	9770812
Mastertig 2500 MLS	6114250
Mastertig 2503 MLS	6112250
Torches	
TTC 160 4m	627016004
TTC 160 8m	627016008
TTC 160 16m	627016016
TTC 220 4m	627022004
TTC 220 8m	627022008
TTC 220 16m	627022016
Earth cable 35mm ² , 5 m	6184311
Electric plug 16 A, 5-poles	9770812
Gas flow meter AR/clock	6265136
Mastertig 3500 MLS	6114350
Mastertig 3503 MLS	6112350
Torches	
TTC 160 4m	627016004
TTC 160 8m	627016008
TTC 160 16m	627016016

TTC 220 4m	627022004
TTC 220 8m	627022008
TTC 220 16m	627022016
Earth cable 35mm ² , 5 m	6184311
Electric plug 16 A, 5-poles	9770812
Gas flow meter Ar/clock	6265136

Mastercool 10 6122350

Mastercool 12 6122360

Water-cooled torches

TTC 200W 4m 627020504

TTC 200W 8m 627020508

TTC 200W 16m 627020516

TTC 250W 4m 627025504

TTC 250W 8m 627025508

TTC 250W 16m 627025516

Panels

MEL, MMA 6106000

MEX, MMA 6106010

MTL, TIG 6116000

MTX, TIG 4T-LOG 6116005

MTZ, TIG MINILOG 6116015

MTM, TIG MEMORY 6116010

Optional device

TIG torch controls

RTC 10 6185477

RTC 20 6185478

Remote control

R 10 6185409

R11T 6185442

R11F 6185407

Transport unit

T100 6185250

T110 6185251

T130 6185222

T200 6185258

5. TECHNICAL DATA

MASTER MLS™ AND MASTERTIG MLS™ WELDING SYSTEM

Power source		Master(tig)3500 MLS, Master(tig) 3503 MLS	
Mains voltage		3~400V -15%...+10% (Mastertig 3500 MLS) 3~400V -15%...+20% (Master 3500 MLS) 3~230V -15%...+10% (Mastertig 3503 MLS) 3~230V -15%...+15% (Master 3503 MLS)	
Rated power	40% ED MMA	350A	
	60% ED MMA	285A	
	100% ED MMA	220A	
	30% ED TIG	400A	
	60% ED TIG	285A	
	100% ED TIG	220A	
Connection cable/fuse		4 x 2.5S mm ² - 5 m/16 A delayed (Master(tig) 3500 MLS) 4 x 6S mm ² - 5 m/32 A delayed (Master(tig) 3503 MLS)	
Welding current range (nominal values)	MMA	10 A/20.5V...350A/34.0V	
	TIG	5A/10.0V...400A/26.0V	
Max welding voltage		45.0V/350A	
Electrode sizes to be welded		Ø1.5...6.0 mm	
Welding current control		stepless	
Open circuit voltage		80V	
Efficiency		86% (350A/34,0V)	
Power factor		0.95 (350A/34,0 V)	
Open circuit power		approx. 10 W	
External dimensions	length	500mm	
	width	180mm	
	height	390mm (650mm: TIG power source + cooling unit)	
	weight, TIG		23 kg
		MMA	21 kg
Power source		Master(tig) 2500 MLS, Master(tig) 2503 MLS	
Mains voltage		3~400V -15%...+10% (Mastertig 2500 MLS) 3~400V -15%...+20% (Master 2500 MLS) 3~230V -15%...+10% (Mastertig 2503 MLS) 3~230V -15%...+15% (Master 2503 MLS)	
Rated power	40% ED MMA	250A	
	60% ED MMA	205A	
	100% ED MMA	160A	
	30% ED TIG	300A	
	60% ED TIG	205A	
	100% ED TIG	160A	

Connection cable/fuse		4 x 1.5S mm ² - 5 m/10 A delayed (Master(tig) 2500 MLS) 4 x 2.5S mm ² - 5 m/20 A delayed (Master(tig) 2503 MLS)
Welding current range (nominal values)	MMA TIG	10 A/20.5V...250A/30.0V 5A/10.0V...300A/22.0V
Max. welding voltage		36.0V/250A
Electrode sizes to be welded		Ø1.5...5.0 mm
Welding current control		stepless
Open circuit voltage		80V
Efficiency		86 % (250A/30.0V)
Power factor		0.95 (250A/30.0V)
Open circuit power		approx. 10 W
External dimensions	length	500 mm
	width	180 mm
	height	390 mm (650 mm: TIG power source + cooling unit)
	weight, TIG	22 kg
	MMA	20 kg

Cooling unit (TIG welding)

Mastercool 10, Mastercool 12

Connection voltage		400V -15%...+10% (Mastercool 10) 230V -15%...+10% (Mastercool 12)
Connection capacity	100 % ED	250 W
Cooling power		1.05 kW
Start pressure, max.		4.5 bar
Cooling liquid		20% - 40 % glycol-water
Reservoir volume		approx. 3 l
External dimensions:	length	500 mm
	width	180 mm
	height	260 mm
	weight	10 kg

Power source and cooling unit

Operating temperature range	-20 ... +40 °C
Storage temperature range	-40 ... +60 °C
Degree of protection	IP 23 C

The products meet conformity requirements for CE-marking.

KEMPPi OY
PL 13
FIN – 15801 LAHTI
FINLAND
Tel (03) 899 11
Telefax (03) 899 428
www.kemppi.com

KEMPPiKONEET OY
PL 13
FIN – 15801 LAHTI
FINLAND
Tel (03) 899 11
Telefax (03) 7348 398
e-mail: myynti.fi@kemppi.com

KEMPPi SVERIGE AB
Box 717
S – 194 27 UPPLANDS VÄSBY
SVERIGE
Tel (08) 59 078 300
Telefax (08) 59 082 394
e-mail: sales.se@kemppi.com

KEMPPi NORGE A/S
Postboks 2151, Postterminalen
N – 3103 TØNSBERG
NORGE
Tel 33 34 60 00
Telefax 33 34 60 10
e-mail: sales.no@kemppi.com

KEMPPi DANMARK A/S
Literbuen 11
DK – 2740 SKOVLUNDE
DANMARK
Tel 44 941 677
Telefax 44 941 536
e-mail:sales.dk@kemppi.com

KEMPPi BENELUX B.V.
Postbus 5603
NL – 4801 EA BREDA
NEDERLAND
Tel (076) 5717 750
Telefax (076) 5716 345
e-mail: sales.nl@kemppi.com

KEMPPi (UK) Ltd
Martti Kemppi Building
Fraser Road
Priory Business Park
BEDFORD, MK443WH
ENGLAND
Tel 0845 6444201
Fax 0845 6444202
e-mail: sales.uk@kemppi.com

KEMPPi FRANCE S.A.
S.A. au capital de 5 000 000 F.
65 Avenue de la Couronne des Prés
78681 EPONE CEDEX
FRANCE
Tel (01) 30 90 04 40
Telefax (01) 30 90 04 45
e-mail: sales.fr@kemppi.com

KEMPPi GmbH
Otto – Hahn – Straße 14
D – 35510 BUTZBACH
DEUTSCHLAND
Tel (06033) 88 020
Telefax (06033) 72 528
e-mail:sales.de@kemppi.com

KEMPPi SP. z o.o.
Ul. Piłsudskiego 2
05-091 ZĄBKI
Poland
Tel +48 22 781 6162
Telefax +48 22 781 6505
e-mail: info.pl@kemppi.com

KEMPPi SWITZERLAND AG
Chemin de la Colice 4
CH-1023 Crissier/ Lausanne
SUISSE
Tel. +41 21 6373020
Telefax +41 21 6373025
e-mail: sales.ch@kemppi.com

KEMPPi WELDING
MACHINES AUSTRALIA PTY LTD
P.O. Box 404 (2/58 Lancaster Street)
Ingleburn NSW 2565, Australia
Tel. +61-2-9605 9500
Telefax +61-2-9605 5999
e-mail: info@kemppi.com.au